



FROSCH

Mudflaps rear FAW X80, 2018->

www.frosch.pro

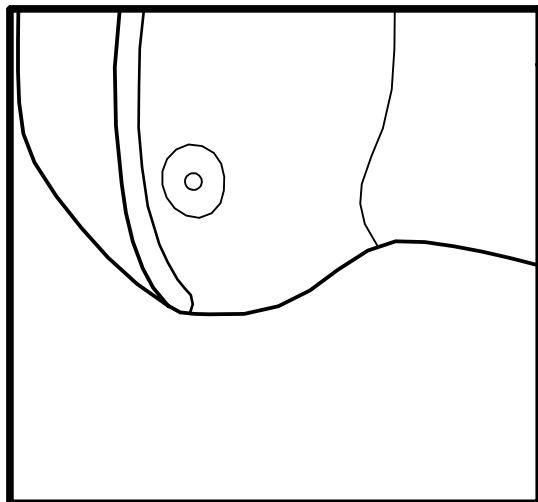


Preparation

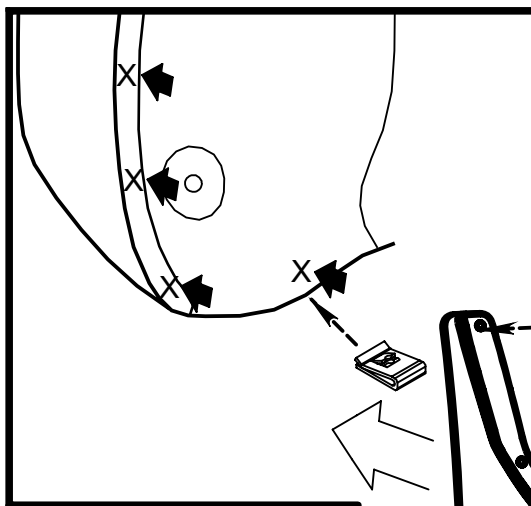


Installation

4x  - screw $\varnothing 4,2 \times 16$ mm

1x  - spring clip

Art.: EXP.NLF.62.16.E13

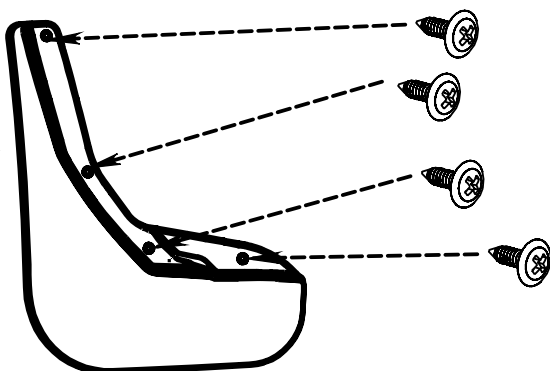

Spring clip attach on the back of the original fender guard

Set Package

Mudflap - 2 pcs. Screw

$\varnothing 4,2 \times 16$ mm - 8 pcs.

Spring clip - 2 pcs.